

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

SAFE BOX

USER MANUAL

MODEL:SS-60

We continue to be committed to provide you tools with competitive price.

 
"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

SAFE BOX

MODEL:SS-60

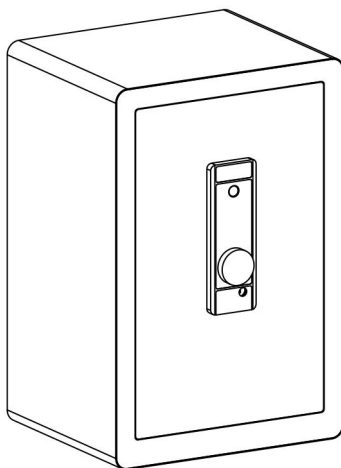




NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 
 
 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

INSTRUCTIONS



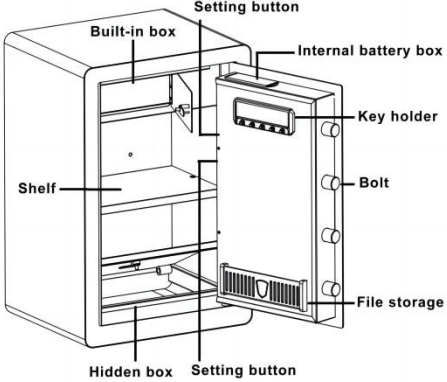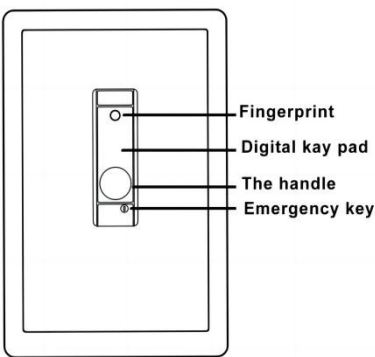

Thank you very much for choosing this safe box. Please read all of the instructions before using it.The information will help you achieve the best possible results.



TECHNICAL PARAMETERS



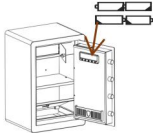
Model	SS-60
Working Voltage Range	4.2-6.8Vdc
Working Undervoltage Point	4.6V plus or minus 0.20V
Quiescent Current	Less than 5A
Product Size	400*330*600 mm
Net Weight	22.85 kg
Gross Weight	25.20 kg
Working Power	4 x AA(1.5V) batteries

PARTS LIST

English Manual*2	
Emergency Key*2	
Expansion Bolt*5 (φ10*50)	
External Power Box*1	

OPENING YOUR SAFE FOR THE FIRST TIME

Open the door for the first time, use the configured emergency key to open the door. The operation steps are as follows:
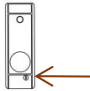
<p>1. Slide down to open the emergency lock cover.</p>		<p>4. Open the battery box and install batteries.</p>	
<p>2. Insert the emergency key into the keyhole and push it to rotate 65° counterclockwise.</p>		<p>5. Make sure the battery matches '+' and '-' in the box. (not including 4 alkaline 1.5V batteries)</p>	
<p>3. Turn the handle clockwise to open the door.</p>		<p>6. Weak power, emergency method start: Emergency key.</p>	

DESCRIPTION:

1. This product has 2 sets of passwords. Factory original password: "123456", factory management you need set it up your self.
2. None of the fingerprints can unlock the safe in factory Settings.

PERSONAL PASSWORD SETTING

1. After opening the safe, touch the screen to wake it up.
 2. Press '00', then press the setting button inside the box, enter new password and press # to confirm. (The password has 3-12 digits)
- Tip: If the operation is wrong, the buzzer will sound "beep" three times. Please reset it. Note that the battery is weak and cannot be operated.**

MANAGE PASSWORD SETTINGS

1. After opening the safe, touch the screen to wake it up.
2. Press 11, then press the setting button inside the box, enter new password and press # to confirm. (**The password has 3-12 digits**)

FINGERPRINT SETTING

1. After opening the safe, press the setting button inside the box. When you hear two short sounds of "beep", the lock light blinks. At this time, collect fingerprints on the scanner for four times.
2. One more "beep", followed by a long "beep" sound, indicating successful fingerprint registration
3. Other fingerprints can be registered in this way. Up to 30 pieces can be registered.

Tip: If the operation is wrong, the buzzer will sound "beep" three times. Please reset it. Note that the battery is weak and cannot be operated.

OPEN THE SAFE

1. Using fingerprint: Verify with a registered fingerprint, put your finger on the scanner. If the recognition is successful, a long "beep" will be heard. If the identification fails, mismatched rings are heard and the panel displays that the lock is not enabled.
2. Using digital: Touch the screen and enter a 3-12 digits password. If the recognition is successful, a long "beep" will be heard. If the identification fails, mismatched rings are heard and the panel displays that the lock is not enabled.

HOW TO REMOVE THE SHELF

Gently push 4 bendable small iron strips under the shelf, when strips are showing a vertical , you can easily take out the shelf.

LOW BATTERY ALERT

1. If the battery voltage is below 4.8V, the red light will flash.
2. If the battery voltage is below 3.8V, user operation is prohibited. 6 beeps will indicate that the battery is low and needs to be replaced.

ALARM FUNCTION

1. In the sleep state, touch the screen to wake it up. Press * and hear a sound of "beep". The light of digital touch pad turns off, indicating that the touch screen has entered alert state. At this time the safe will alarm if it vibrates.
2. Wrong fingerprint and password input for more than 3 (5) times, the alarm system will sound for 30 seconds.

Tip: Enter the correct fingerprint or password. The alert status is lifted automatically. If the correct fingerprint is not entered, the alarm will automatically stop after 30 seconds, but the alarm will not be lifted.

SYSTEM INITIALIZATION

Long press the green button on the mechanism for 5 seconds. The system will restore the initial settings and clear all fingerprints and passwords.

NOISE ELIMINATION FUNCTION

1. Enter "11#" is the mute switch button. .
2. Enter "11#" turn on the sound

HOW TO WALL OR FLOOR MOUNTING

- * Drill the appropriate size holes for the anchors you are using
- * Mount the safe by running screws from inside of the safe and securing to

anchors

* Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete)

SAFETY AND COMPLIANCE

1. Reduce the risk of theft, the safe must be posted on the wall or floor to ensure safety.
2. Please take good care of the emergency key and store it in a secret place away from the safe. Do not put the emergency key into the safe, or the emergency key will not be used to open the safe when the battery runs out.
3. Do not place the product on an unsafe overhead, so as to avoid falling, damaging the product or injuring people.
4. Do not spill liquid on the control panel, or it may cause electric shock to the internal electronic components and prevent them from working properly.

WARMLY REMINDER

1. Because it is purely handmade, inside solder joint or rust stains are normal phenomenon.
2. Please keep emergency keys, secret cabinet keys and external power supply box safe.
3. The emergency key cannot open the safe of other brands or the same brand, which is unique.
(Please do not try, to avoid damage to the safe and the unmatched key cannot be taken out)
4. The protective film on the knob cover can be torn off.
5. Before closing the door, do not remove the emergency key or adjust its direction, which can avoid the lock bolt from jamming, and knob operation will be more smooth.
6. The door won't shut: Make sure there are no obstructions. If the door

bolts are extended, re-enter the user code and turn the knob clockwise to retract them.

AFTER-SALES SERVICE

1. If the product you received has other problems such as usage problems, please feel free to contact us, and reply to online customer service within 24 hours to serve you.
2. Our products support 90 days for no reason to return or exchange.
3. I wish you a happy online shopping.

Made in China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support